

Don Giovanni music player

WARNINGS



Do Not Disassemble

Do not attempt to service the equipment beyond that described in this manual. Touching the equipment's internal parts could result in severe personal injury. All other servicing or problems as listed below should be referred to qualified Consonance service technicians:

- The power supply cord or plug has been damaged
- Objects have fallen or liquid has been spilled into the equipment
- The equipment does not appear to function normally or exhibits a marked change in performance
- The equipment has been dropped or the enclosure damaged

Do not under any circumstances allow anyone to modify your Consonance equipment without first checking with Opera Audio, your dealer, or your distributor. Unauthorized modifications will invalidate your guarantee.



Power Source

The equipment should be connected to a power supply only of the type described in this manual or as marked on the equipment.



Grounding or Polarization

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the amplifier.



Ventilation

The equipment should be situated so that its location or position does not interfere with its proper ventilation.

1. The equipment must not be placed on bed, sofa, or similar surfaces, that may block the ventilation openings.
2. The equipment must not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air.
3. The equipment should be situated away from heat sources such as radiators, heat register, stoves, or other electronic appliances that produce heat. This equipment is not intended for commercial use.



 
 
Water and Moisture

The equipment should not be used near water, e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc. Similarly, do not placed objects filled with liquid, such as vases on top of the equipment.




Cleaning

Never clean with furniture polish, benzene, or volatile liquids. Dust periodically with a clean, soft paint brush. Fingerprints can be removed with a moist polishing cloth.

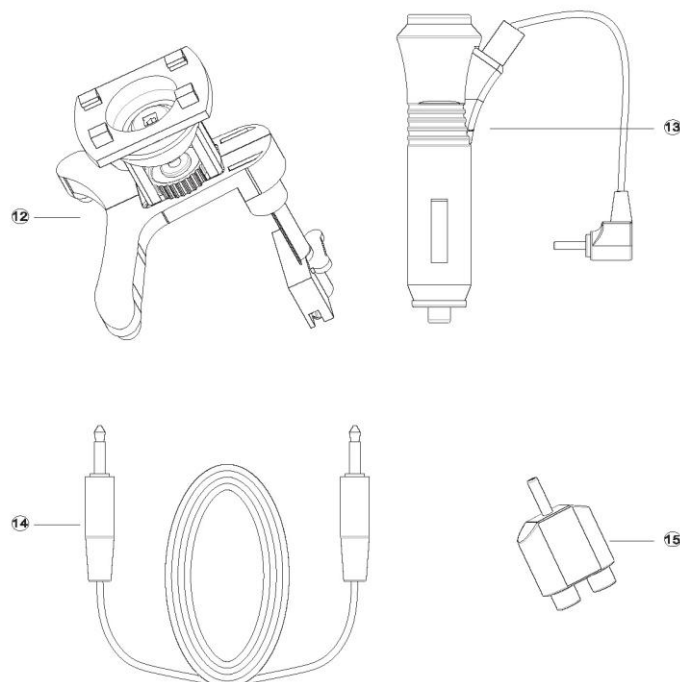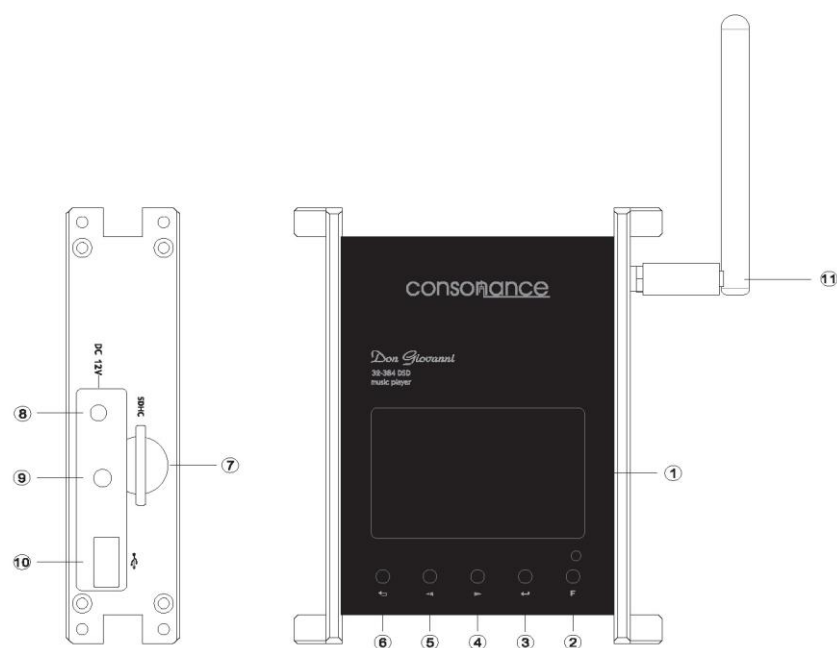

 
1. Display screen
2. F button — The standby mode and cover show button
3. OK button
4. The next /scroll to the right direction
5. The forward /scroll to the right direction
6. EXIT button
7. SD card slot
8. DC12V 2.5mm jack
9. Line out 3.5mm jack
10. USB2.0 jack
11. WIFI antenna
12. Stander for car
13. Car cigarette lighter for electrical appliances
14. 3.5mm Stereo audio cable
15. 3.5mm/RCA converter

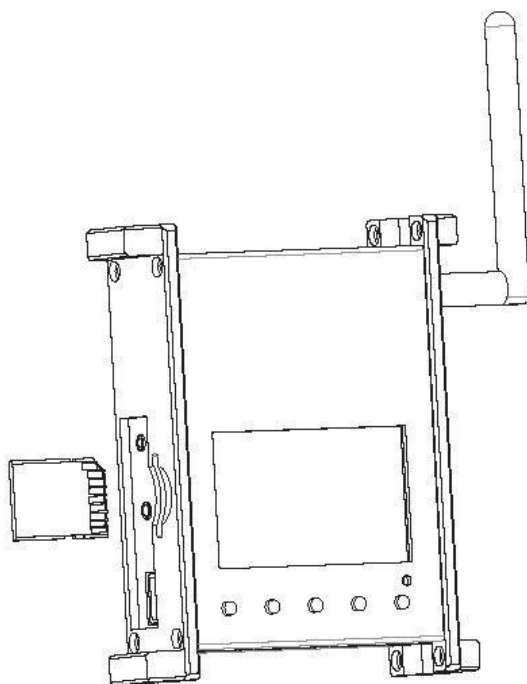

Connect the memory:


This machine provides a USB2.0 interface and a SD card interface . Support FAT32 / NTFS/maximum 128 GB.

 Use in car :

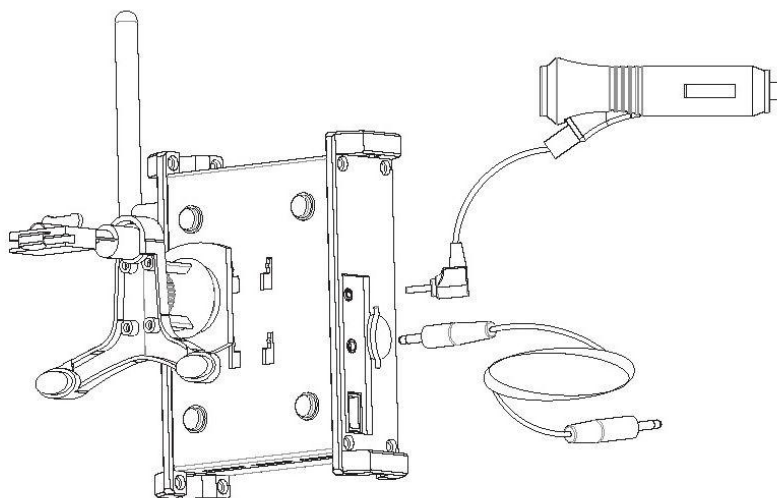

Using stander can be fixed in the car air conditioning outlet, or directly to place in storage tank inside the car. For electrical access to the car cigarette lighter socket, cigarette lighter for appliances at the other end inserted into the player DC12V power supply jack. Will be 3.5 mm stereo audio line connected to the car stereo AUX input port.

 
Access to the HiFi audio system :

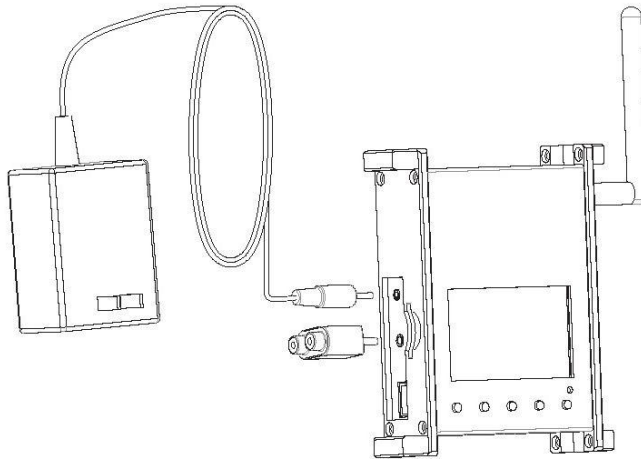

Use DC12V switch power adapter, DC12V power supply port access player. Access will be 3.5 mm/RCA converter line output port, use RCA signal cable access the HiFi audio system.

How to use

 
Please make sure the USB storage device or SD card after the connection, access to the power adapter, if the machine is in standby mode, press the F button, display icon on the screen, the entire startup process about 30 seconds.

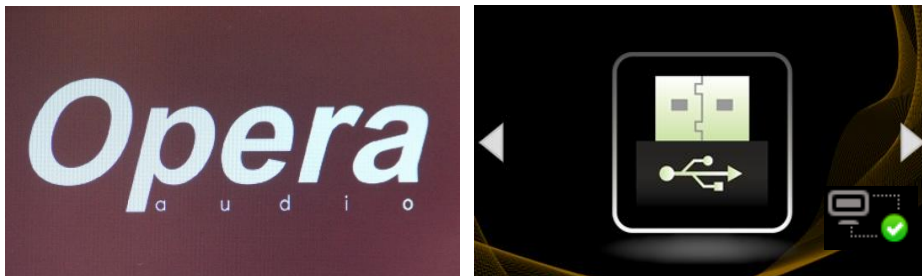




Using the buttons on the panel for operations

 
Press the ◀ and ▶ button move to the desired function interface. Press the ↶ button to enter the corresponding function interface; Press the ↷ button to exit.

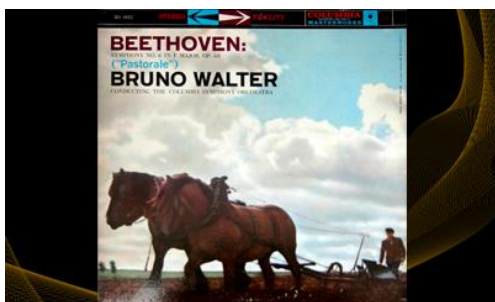


When using a standby mode choose the interface, press the  button. Press the F key to call it up. When it is used in the car, please use the switch on the cigarette lighter directly to turn off.



 For easily finding the music click the F button and show cover image in the display. Click again to exit or wait two seconds automatically exit. Press  and  Can browse the other pictures.

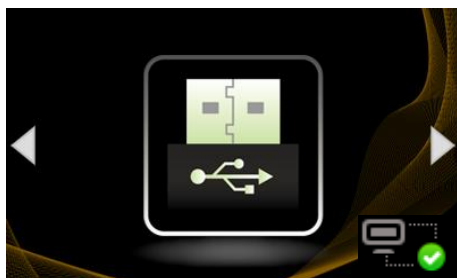

Insert an external USB storage device it show USB-1. If the SD card is inserted SD-1 will be shown. Press the  key on the front panel to enter the playlist. If the USB disk has the partitions it will display USB-1 and USB-2, etc.

When browsing the contents the icon can tell you the current files type.

 
 


On behalf of the currently displayed as a folder



On behalf of the currently displayed as a music file

Press  and key  find the folder, by clicking the  button and select the file to play

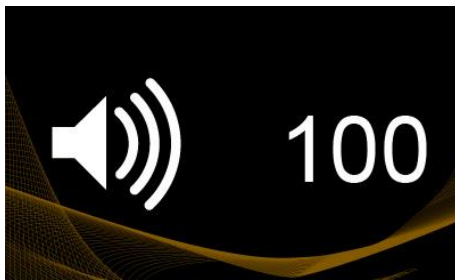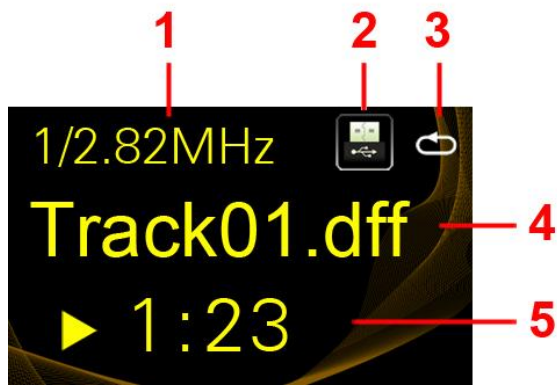

Long press ◀ and ▶ volume can be adjusted

 
Setup




Setup menu is divided into three options, but by manipulating the ◀ and ▶ on the front panel to select setup project.

1/3 The background brightness

Through/and/keys to adjust the brightness of the, level 3 is the brightest.

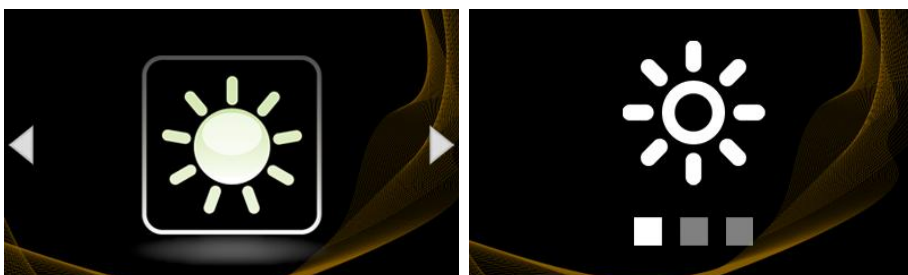

2/3 Firmware update

System can update the firmware upgrade, the upgrade firmware file provided by The opera audio co.,ltd at the end of *. PKG file into the U packing directory. Insert the USB jack of the machine, choose the interface shown below. Press the  button to enter the firmware update interface. Waiting to pull out U disk after the update is successful. The system will automatically restart and finished the system update.




3/3 About

You can click to enter, view the operating system version information



DLNA Mode

Turn on the player, after waiting for the right ICONS  become green.

It suggests a point-to-point WIFI connectivity.

The player set up a dedicated for remote control function password-less WIFI network, name is “opera”. Set the cell phone or pad connected to the WIFI network.

We suggest the use of an Apple/Android phone or ipad as a suitable remote control for the player.

iOS:



8 Player (We recommend you purchase the official version)

How to use 8 player: <http://www.opera-consonance.com/soft/8player.pdf>

Android:



BubbleuPnP (Recommended)

Specification

Support music format	DSD lossless: DSF (DSD), DIFF (DSD) PCM lossless: FLAC, Apple Lossless (ALAC), WAV, AIFF, APE PCM compress AUDIO: MP3, AAC
Sampling rates	PCM, 44.1kHz-384kHz, 16-32bit, Stereo DSD, 2.8MHz, 5.6MHz, 1bit, Stereo
Inputs	USB2.0, SDHC up to 128GB
Outputs Analog	3.5mm line out 2.3V
Distortion	Less than 0.001% S/N: -120 dB
Power supply	DC12V car AC12V plug or home AC to DC12V plug
Display	3 inch TFT
Dimensions	24*71*120mm (D*W*H)
Weight	390g

Warranty

Opera audio guarantees each product manufactured by us to be free from defects in materials and workmanship under normal use. Our obligation under this warranty is limited to making good at our factory any part or parts thereof which shall, within 1 year after delivery to the original purchaser, be returned to us with transportation charges prepaid, and which an examination shall disclose to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on our part. This warranty shall not apply to any Opera audio product which shall have been repaired or altered outside of our factory in any way so as to affect its stability, nor which has been subject to misuse, negligence or accident. Warranties of the vacuum tubes are by the respective manufacturers, usually 90 days.

Please mail or e-mail the Registration Card to the address as follows:

The Opera Audio Co., Ltd.

No.2 JiuXianQiaoLu
ChaoYang District
Beijing, China
Tel: 86 10 59789215
Fax: 86 10 59789265
support@opera-consonance.com
www.opera-consonance.com



Registration Card

Name
Address
City
State
Zip
Email
Telephone
Model
Serial Number
Purchase Date
Dealer