

Calaf integrated stereo amplifier

USER GUIDE

Congratulations on your new CONSONANCE!

Our products are based on a simple philosophy:

The component shall reproduce the original musical sound, purely and naturally.

The products are easy to operate and are manufactured according to the best quality principles.

All CONSONANCE products are created with acoustical instruments in a concert situation as point of reference. The music is reproduced exactly like the original and is limited only by the quality of the recording.

Our aim is to give you the best possible music experience!

CONTENTS


Sound Advice	p.2
General use	p.3
Remote Control	p. 3
Use & Placement	p. 3
Cleaning	p. 4
Technical specifications	p. 4
Note & Warning	p. 5
Warranty	p. 5

SOUND ADVICE

The Consonance Calaf Integrated Amplifier is easy to connect and operate and requires no prior technical knowledge. However, to get the most out of the amplifier's superior sound and music quality, we have provided a brief description of the connections and use of the amplifier in order to provide a total music experience.

We recommend keeping this user guide for future reference.

GENERAL USE

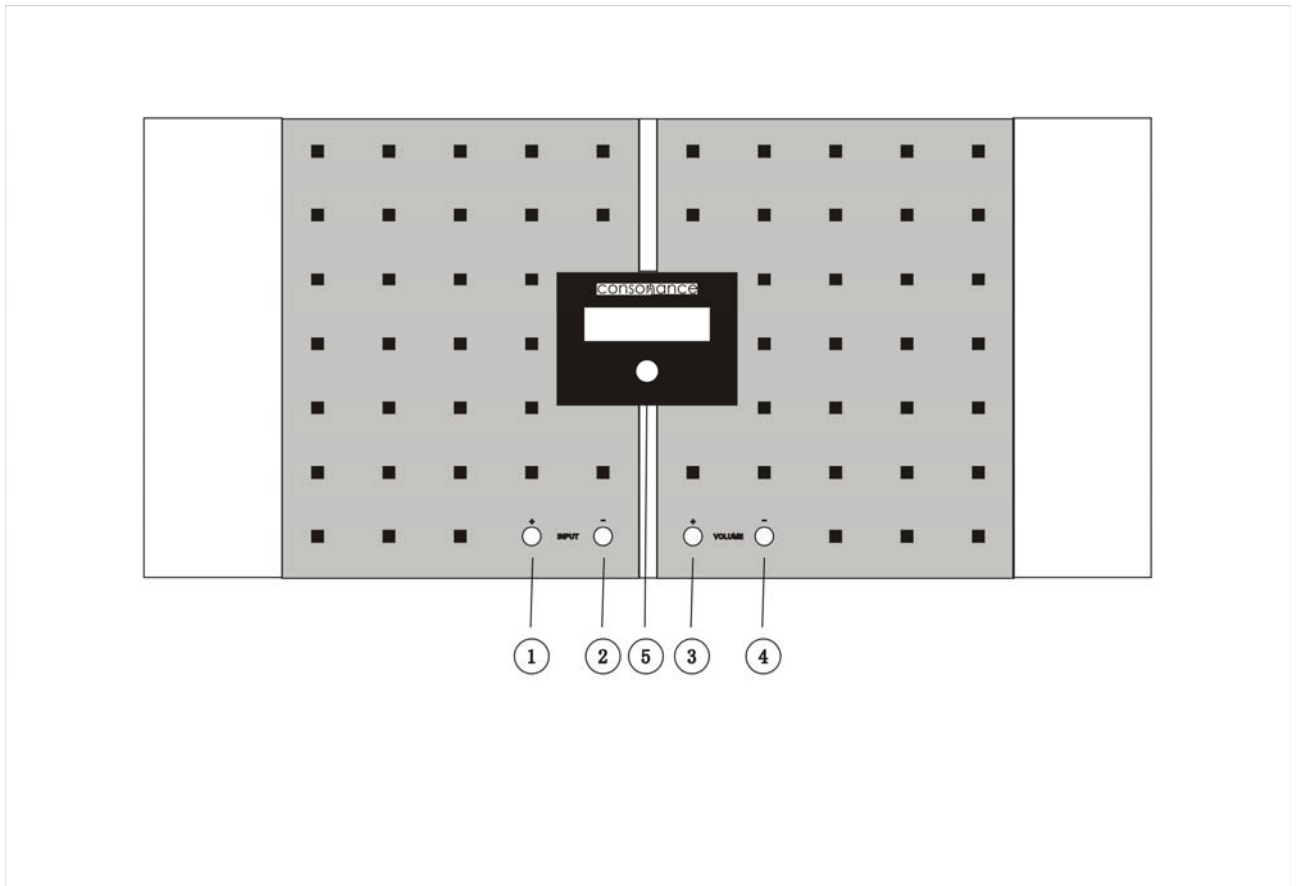


The amplifier is switched on with the button **No.5** in the middle of the front panel. A red LED in the display , indicates that power is switched on. By pushing the same button one more time the power is switched off.

On the left buttons **No.1 and No.2** is the channel selector with selections: CH1("1"), CH2("2"), CH3("3"), CH4("4") ,BALANCED input("BL"), and the right of the front panel, the right buttons **No.3 and No.4** is the volume control.

The amplifier is protected against short-circuiting of the speaker terminals , but we still recommend turning off the amplifier when connecting and disconnecting signal and speaker cables.

The amplifier is designed to be used with a CD player, DVD player, cassette deck, tuner or similar sound source.

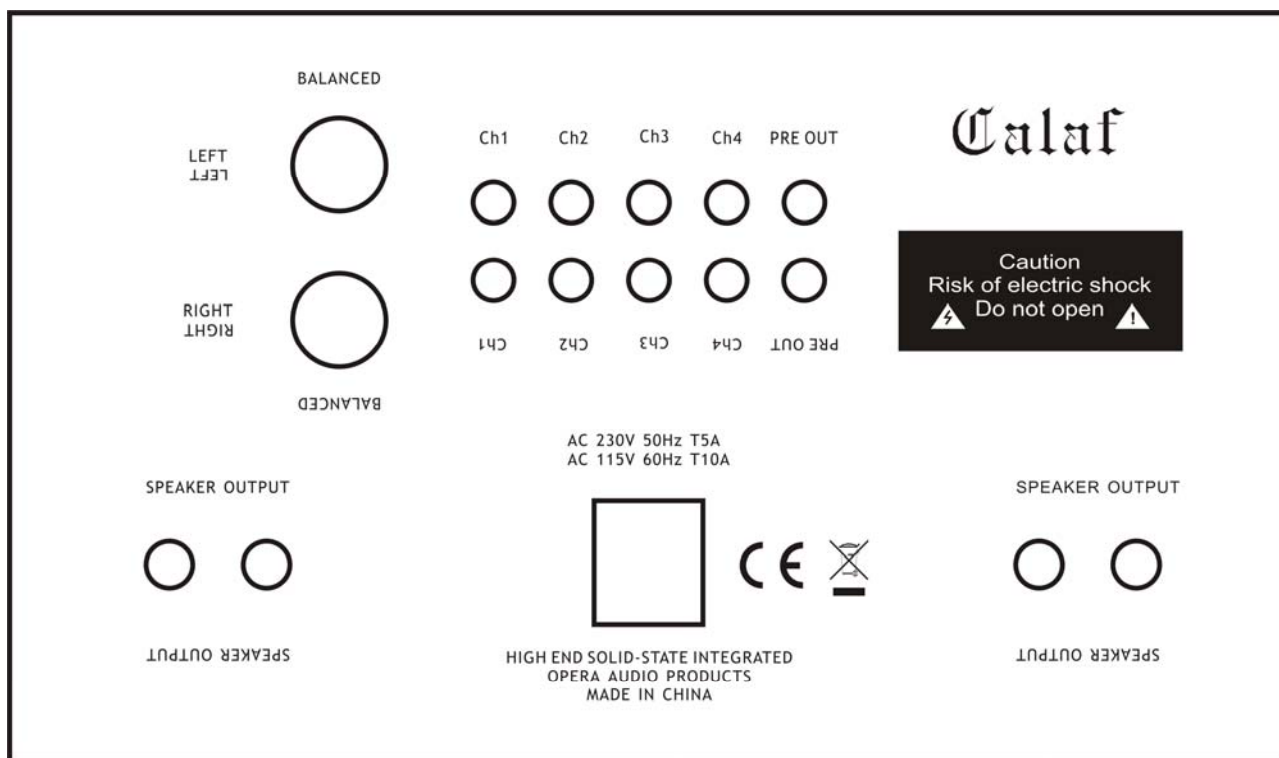


From left to right are:
 BALANCED CH ("BL" displayed on the screen) Balanced/XLR Signal CH right/left
 CH1 ("1" displayed on the screen) Phono/RCA Signal CH right/left
 CH2 ("2" displayed on the screen) Phono/RCA Signal CH right/left
 CH3 ("3" displayed on the screen) Phono/RCA Signal CH right/left
 CH4 ("4" displayed on the screen) Phono/RCA Signal CH right/left
 PRE out (Line output) Phono/RCA right/left
 Speaker output right
 AC Power connection 230V / 115V / 100V AC dependent on country.
 Speaker output left

The preamplifier section of the Calaf has two types of audio CHs: unbalanced audio signal with RCA plugs (phono plugs) and true balanced audio signal with XLR plugs (pin 2 is positive phase, pin 3 is negative phase and pin 1 is chassis earth), one outputs: unbalanced audio signal with RCA plugs (phono plugs).

CONSONANCE REMOTE CONTROL

The Consonance Calaf can be controlled by an optional Consonance system remote control. Like other Consonance products, the number of buttons is kept to a minimum. The volume, channel select and mute functions of the Calaf can be operated by using the remote control. The Consonance system remote control will also control other Consonance products like CD players, avoiding the need of several different remote control devices. The remote control uses four 1.5-volt LR03 AAA batteries .

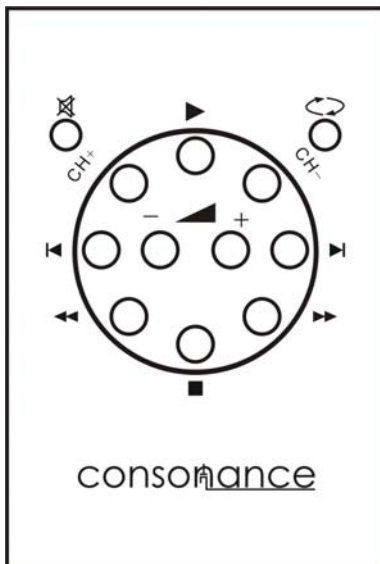

USE & PLACEMENT

The Consonance Calaf should be placed on a flat, hard surface for proper cooling. The amplifier performs best after being switched on for 1 hour for heating up. A certain space is required for air circulation above and below the amplifier. The amplifier must never be placed on a carpet or similar surface that obstructs air circulation through the component. Nor must it be covered while in use or placed on a narrow shelf or in another confined space.

The amplifier will automatically switch itself off if overheated.

CLEANING

The top cover and knobs are made of brushed and anodized aluminum, while the front panel is made of solid, powder coated aluminum. Fingerprints or stains on the front panel, knobs or top cover can be removed with a cloth moistened with warm water.

TECHNICAL SPECIFICATIONS

Calaf Integrated Amplifier

Specifications:

Power output	200W + 200W at 8 Ohms Dual Mono
Minimum load	2 ohms speakers can be connected.
CH Sources	5 remote controllable inputs switched by gold plated relays
PRE OUT	Preamplifier output
CH Terminals	Gold plated Phono/RCA unbalanced and gold plated XLR balanced
Frequency response	Less than +/- 0.1 dB deviation 20Hz-80kHz
Phase response	Less than 2 degrees deviation 20Hz-80kHz
Signal-to-noise ratio	More than 95dB
Crosstalk	Less than -100dB
Distortion	Less than 0.015% @ 100W 8 Ohms
Damping factor	More than 1000
Remote Control	RC-5 compatible IR system 36kHz modulation
Dimensions	20cm x 45cm x 45cm (HxWxD), 45kg shipment weight.

NOTE & WARNING

Consonance products should only be opened or serviced by certified technicians. The devices contain electronic components that can cause severe electric shock. Work performed on Consonance products by unqualified personnel can cause serious damage and personal injury.

Opening of the product by non-authorized personnel will void the guarantee.

The products must not be exposed to rain or moisture.

Warranty

Opera audio guarantees each product manufactured by us to be free from defects in materials and workmanship under normal use. Our obligation under this warranty is limited to making good at our factory any part or parts thereof which shall, within 1 year after delivery to the original purchaser, be returned to us with transportation charges prepaid, and which an examination shall disclose to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on our part. This warranty shall not apply to any Opera audio product which shall have been repaired or altered outside of our factory in any way so as to affect its stability, nor which has been subject to misuse, negligence or accident. Warranties of the vacuum tubes are by the respective manufacturers, usually 90 days.

Please mail or e-mail the Registration Card to the address as follows:

The Opera Audio Co., Ltd.

No.2 JianXianQiaoLu

ChaoYang District

Beijing, China

Tel: 86 10 64377091

Fax: 86 10 64377465

support@opera-consonance.com

www.opera-consonance.com



Registration Card

Name
Address
City
State
Zip
Email
Telephone
Model
Serial Number
Purchase Date
Dealer